

Air gap sensors SOPA

FESTO



Air gap sensors SOPA

Product range overview

FESTO

Key features

General

Lightweight, compact and highly precise, this pneumatic solution offers impressive scope for integration: SOPA features a control module, compressed air regulation, measurement air switch-off and air jet function as well as up to four measuring modules. All in all, an attractively priced solution for low tolerances.

Precise

The air gap sensor SOPA senses exactly in the μm range whether the workpiece is lying flat or resting against other workpieces before clamping and whether the machining tool is exactly aligned on the spindle. Two different distance values can be sensed with one measuring module. The solution for two-stage workpiece machining with different surface finishes.

Easy to use

Lightweight, compact and simple into the bargain: thanks to parameterisation via teach-in or numerical setting using three buttons. Simple assembly and commissioning thanks to the inclusion of virtually unregulated compressed air and an integrated air jet function that needs no additional peripheral devices.

Reliable and flexible

The multi-coloured LCD display with clear operating status indication ensures maximum reliability, while selectable monitoring points (1 to 4) and further functions make the application extremely flexible.

Individual sensor module




- Sensing range 20 ... 200 μm
- Switch outputs 2x PNP or 2x NPN
- Sensing of two distance values possible
- Integrated air jet function
- Two-colour LCD display
- 2 distance thresholds, for teach-in

Air gap sensors SOPA

Peripherals overview

Peripherals overview

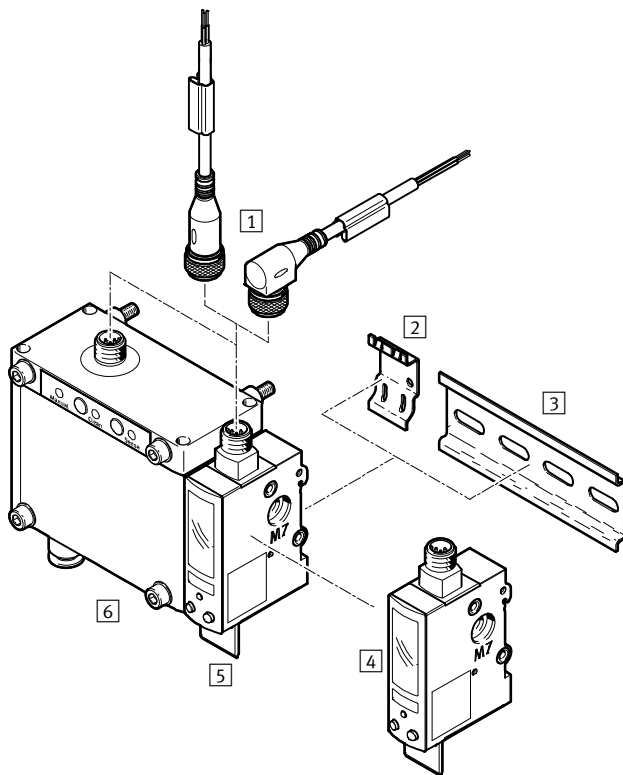

Accessories	
1	Connecting cable for switch output
2	Adapter plate SXE3-W (2 included in scope of delivery with SOPA-...-W-...)
3	Mounting rail to DIN EN 60715
4	Sensor module SOPA-M1-...
5	Inscription label holder SXE3 (included in scope of delivery)
6	Control module with one sensor module SOPA-CM1-...

Ordering data – Connecting cables M12x1				
Technical data ➔ Internet: nebu				
	Number of wires	Cable length [m]	Part No.	Type
Straight socket				
	4	2.5	550326	NEBU-M12G5-K-2.5-LE4
		5	541328	NEBU-M12G5-K-5-LE4
Angled socket				
	4	2.5	550325	NEBU-M12W5-K-2.5-LE4
		5	541329	NEBU-M12W5-K-5-LE4

Ordering data – Adapter plate		
	Part No.	Type
	540214	SXE3-W

Air gap sensors SOPA

Type codes

		SOPA	-	CM1	H	-	R1	-	H	Q6	-	2P	-	M12	-	E1															
Function																															
SOPA	Air gap sensor for contact and distance monitoring via LCD display																														
Modules																															
CM1	Control module with one sensor module																														
CM2	Control module with two sensor modules, pneumatically interlinked																														
CM3	Control module with three sensor modules, pneumatically interlinked																														
CM4	Control module with four sensor modules, pneumatically interlinked																														
M1	Sensor module																														
Manual override for control module																															
H	With manual override																														
Distance sensing range																															
R1	20 ... 200 µm																														
Type of mounting																															
H	H-rail mounting/through-hole																														
W	Additional wall mounting																														
Pneumatic connection																															
Q6	Push-in connector QS-6																														
Electrical output																															
2P	2 switch outputs PNP																														
2N	2 switch outputs NPN																														
Electrical connection																															
M12	Plug M12x1, A-coded																														
Electrical accessories																															
E1	Straight socket, cable 2.5 m																														
E2	Straight socket, cable 5 m																														
E3	Angled socket, cable 2.5 m																														
E4	Angled socket, cable 5 m																														

Air gap sensors SOPA

Technical data

FESTO

Technical data				
Type	SOPA-M1-...		SOPA-CM...-...-H...	SOPA-CM...-...-W...
Sensing range	[µm]	20 ... 200		
Repetition accuracy of switching point ¹⁾	± 2.5 µm: sensing range 30 µm to 150 µm ± 5µm: sensing range 20 µm to 200 µm			
Setting options	Teach-in via display and buttons			
Protection against manipulation	Electronic lock			
Type of display	Multi-coloured illuminated LCD			
Type of mounting	Alternatively: Via H-rail Via through-holes Via wall/surface bracket ²⁾			Alternatively: Via H-rail Via through-holes Via wall/surface bracket ³⁾
Sensing principle	Pneumatic			
Pneumatic connection	QS-6			
Operating voltage range	[V DC]	15 ... 30	22.8 ... 26.4	
Max. output current	[mA]	100		
Electrical connection	Plug M12x1, 5-pin, round design to EN 60947-5-2			
Protection against short circuit	Pulsed			
Protection against polarity reversal	For all electrical connections			
Protection class	IP65 to IEC 60529			

1) Under constant operating conditions (temperature and supply pressure) and nominal measuring nozzle diameter (2 mm).

2) Adapter plate SXE3 must be ordered separately as an accessory → 3.

3) 2 adapter plates SXE3-W included in scope of delivery.


Operating and environmental conditions		
Type	SOPA-M1-...	SOPA-CM...-...
Operating pressure	[bar] –	4 ... 7
Supply pressure	[bar] 0.8 ... 1.6	–
Operating medium	Compressed air in accordance with ISO 8573-1:2010 [7:4:4]	
Note on operating/pilot medium	Operation with lubricated medium possible (in which case lubricated operation will always be required)	
Ambient temperature	[°C] 0 ... +50	
CE mark (see declaration of conformity)	In accordance with EU EMC directive	
Certification	RCM trademark c UL us - Recognized (OL)	

Weight					
	SOPA-M1-...	SOPA-CM1-...	SOPA-CM2...	SOPA-CM3...	SOPA-CM4...
Product weight	[g] 60	510	570	630	690

Materials	
Housing	Reinforced polyamide
Note on materials	Free of copper and PTFE Conforms to RoHS

Air gap sensors SOPA

Technical data

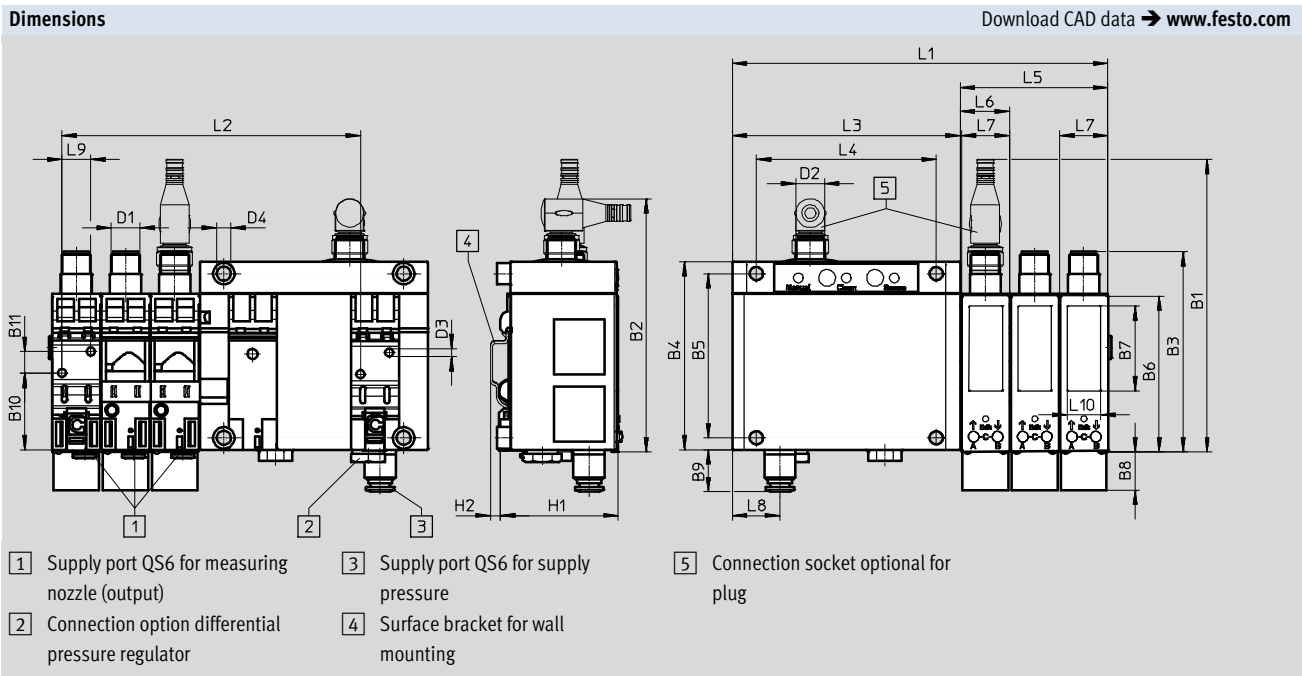

	B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	D1	D2	D3 Ø	D4 Ø
SOPA-CM1H-...	122	106	82.9	78.5	68.5	65	35.4	16.8	17.4	32	9	M12x1	M12x1	3.4	5.5
SOPA-CM2H-...															
SOPA-CM3H-...															
SOPA-CM4H-...															
SOPA-...															


	H1	H2	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10
SOPA-CM1H-...	49	4.2	115.5	83.5	95	75	20.5	20.5	20	19.8	12	14
SOPA-CM2H-...			136	104			41					
SOPA-CM3H-...			156.5	124.5			61.5					
SOPA-CM4H-...			177	145			82					
SOPA-...			95+(n x 20.5)	83.5+(n-1) x 20.5			n x 20.5					

n = Number of sensor modules

Air gap sensors SOPA

Technical data

FESTO

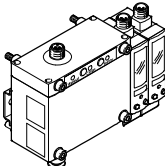Ordering data						
Version	Type of mounting	Number of sensor modules	Switch output PNP		Switch output NPN	
			Part No.	Type	Part No.	Type
Control module with sensor modules						
	Via H-rail	1	552130	SOPA-CM1H-R1-HQ6-2P-M12	552134	SOPA-CM1H-R1-HQ6-2N-M12
		2	552131	SOPA-CM2H-R1-HQ6-2P-M12	552135	SOPA-CM2H-R1-HQ6-2N-M12
		3	552132	SOPA-CM3H-R1-HQ6-2P-M12	552136	SOPA-CM3H-R1-HQ6-2N-M12
		4	552133	SOPA-CM4H-R1-HQ6-2P-M12	552137	SOPA-CM4H-R1-HQ6-2N-M12
	Via wall/surface bracket ¹⁾	1	552138	SOPA-CM1H-R1-WQ6-2P-M12	552142	SOPA-CM1H-R1-WQ6-2N-M12
		2	552139	SOPA-CM2H-R1-WQ6-2P-M12	552143	SOPA-CM2H-R1-WQ6-2N-M12
		3	552140	SOPA-CM3H-R1-WQ6-2P-M12	552144	SOPA-CM3H-R1-WQ6-2N-M12
		4	552141	SOPA-CM4H-R1-WQ6-2P-M12	552145	SOPA-CM4H-R1-WQ6-2N-M12
Individual sensor module						
	Via H-rail	1	552146	SOPA-M1-R1-HQ6-2P-M12	552147	SOPA-M1-R1-HQ6-2N-M12

1) 2 adapter plates SXE3-W included in scope of delivery.

Air gap sensors SOPA

Ordering data – Modular products



M Mandatory data		O Options		M Mandatory data		O Options	
Module No.	Function	Control module override	Distance sensing range	Pneumatic connection	Electrical connection	Electrical accessories	
549902	Modules		Type of mounting	Electrical output			
	SOPA CM1 CM2 CM3 CM4 M1	H	R1 H W	Q6 2P 2N	M12	E1 E2 E3 E4	
Ordering example							
549902	SOPA - M1		- R1 - H	Q6 - 2P - M12		+ E3	

Ordering table				Condi- tions	Code	Enter code
M	Module No.	549 902				
	Function	Air gap sensor for contact and distance monitoring with LCD display			SOPA	SOPA
	Modules	Control module with one sensor module			-CM1	
		Control module with two sensor modules, pneumatically interlinked			-CM2	
		Control module with three sensor modules, pneumatically interlinked			-CM3	
		Control module with four sensor modules, pneumatically interlinked			-CM4	
		Sensor module			-M1	
O	Control module override	With manual override for control module	1		H	
M	Distance sensing range [µm]	20 ... 200			-R1	-R1
	Type of mounting	H-rail mounting/through-hole			-H	
		Additional wall mounting			-W	
	Pneumatic connection	Push-in connector 6 mm			Q6	Q6
	Electrical output	2 switch outputs PNP			-2P	
		2 switch outputs NPN			-2N	
	Electrical connection	Plug M12, A-coded			-M12	-M12
O	Electrical accessories	Straight socket, cable 2.5 m			+E1	
		Straight socket, cable 5 m			+E2	
		Angled socket, cable 2.5 m			+E3	
		Angled socket, cable 5 m			+E4	

1 H Not with module M1 (sensor module)

Transfer order code

549902 SOPA - - R1 - Q6 - - M12 +

Festo North America



**1 Festo Canada
Headquarters**
Festo Inc.
5300 Explorer Drive
Mississauga, ON
L4W 5G4

2 Montréal
5600, Trans-Canada
Pointe-Claire, QC
H9R 1B6

3 Québec City
2930, rue Watt#117
Québec, QC
G1X 4G3



**4 Festo United States
Headquarters**
Festo Corporation
395 Moreland Road
Hauppauge, NY
11788

5 Appleton
North 922 Tower View Drive, Suite N
Greenville, WI
54942

7 Detroit
1441 West Long Lake Road
Troy, MI
48098

6 Chicago
85 W Algonquin - Suite 340
Arlington Heights, IL
60005

8 Silicon Valley
4935 Southfront Road, Suite F
Livermore, CA
94550

Festo Regional Contact Center

Canadian Customers

Commercial Support:
Tel: 1 877 GO FESTO (1 877 463 3786)
Fax: 1 877 FX FESTO (1 877 393 3786)
Email: festo.canada@ca.festo.com

Technical Support:
Tel: 1 866 GO FESTO (1 866 463 3786)
Fax: 1 877 FX FESTO (1 877 393 3786)
Email: technical.support@ca.festo.com

USA Customers

Commercial Support:
Tel: 1 800 99 FESTO (1 800 993 3786)
Fax: 1 800 96 FESTO (1 800 963 3786)
Email: customer.service@us.festo.com

Technical Support:
Tel: 1 866 GO FESTO (1 866 463 3786)
Fax: 1 800 96 FESTO (1 800 963 3786)
Email: product.support@us.festo.com

Subject to change

Internet: www.festo.com/us